



Card Reader Cleaning Card

TDS

TECHNICAL DATA SHEET

Card Reader Diamond Flocked Cleaning Card

Both sides flocked in diamond grid, pre-saturated with Alcohol Free Cleaner

Packing : 50 Cleaning Cards Per Box

Nominal Size Dimension : 54 X 86 X 1.10 mm

Part Number : CRCC-CR80FD-AF

Features & Benefits

- Clean Efficiently due to Brush Cleaning Effect.
- Less machine failures due to effective dirt removal.
- Simple and Easy Handling
- Effectively clean magnetic head conceal in difficult to reach recess area.

Applications

For all Automated Teller Machines with mechanical and motorized insertion card readers but no shutter.
Cleaning the IC Contact Pins in Smart Card Readers and Magnetic Head in Swipe or Insertion Card Reader.

Characteristics


Card Reader Flocked Cleaning Card is best recommended for Preventive Maintenance on ATM Machine and Slot Machine and Smart Card Reader. It is extremely effective in high level of dirt collection.

It can be pre-moistened with Alcohol Free Cleaner to achieve high degree of Cleanliness.

Our proprietary formulated Alcohol Free Cleaner Solution is anti-microbial, 100% non-toxic, non- flammable, environmental friendly and RoHS compliant. Refer to MSDS-CRCC-CR80FD-AF

Alcohol Free Cleaner is free from Iso Propyl Alcohol, Ammonia and Sodium Lauryl Sulfate and safely cleans , removes dust, dirty stain, and leaves no residue on the surface.

Below Picture illustrates the Flocked Cleaning Card Microfibers Cleaning Process

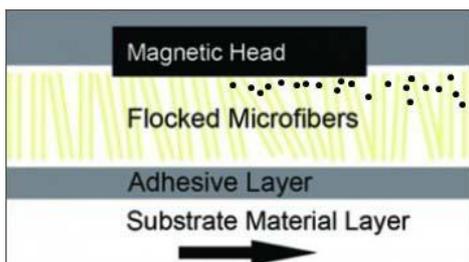

The excellent dirt collection of the flock prevents the distribution of the dirt on the inside of the card reader.

The particles are collected by the fibers and removed when withdrawing the card.



Card Reader Cleaning Card

TDS

TECHNICAL DATA SHEET

Technical Specification

The substrate material is PVC and both sides are flocked in diamond grid microfibers, pre-saturated with alcohol free solution and pouched in polyester laminated aluminum foil to provide excellent moisture vapor barrier properties.

1. Card material : flocked fibers/plastic core/flocked fibers
2. Card dimensions: 54 x 86 x 1.10 mm
3. Card dimension tolerance :
2.125 X 3.375 X 0.0433 (in Inches) thickness tolerance negative -ve 0.005866”
53.975 X 85.7 X 1.10 (in mm) thickness tolerance negative -ve 0.149mm
Uncompressed thickness : 1.1 mm and Compressed thickness : 0.76mm
4. Corner radius : 4 Sides.
5. Paper pouch Size : 83 X 127 (in mm)
6. Solution : alcohol free cleaner
7. Solution volume : 1.0 +/- 0.25 ml

Packaging





Card Reader Cleaning Card

TDS

TECHNICAL DATA SHEET

Card Reader Diamond Flocked Cleaning Card

Both sides flocked in diamond grid, pre-saturated with Alcohol Free Cleaner

Packing : 50 Cleaning Cards Per Box

Nominal Size Dimension : 54 X 86 X 1.10 mm

Part Number : CRCC-CR80FD-AF

Packing : 50 Cleaning Cards per Box

Bag Dimension (mm) : 130-75-95 mm

With Printed Label.

Gross Weight (Kg) : 0.41 kg

Carton Box : 50 Boxes per Cartons ; 2500 Cards per Carton.

Carton Dimension (mm) : 395*270*495

Cubic Volume (m3) : 0.053

Gross Weight (Kg) : 21.80

Custom HS Code : 3402.19.00