



Thermal Printer Cleaning Cards, Swabs, Pens and Wipes

Your Reliable Partner for Manufacturing of
High Quality Technical Cleaning Kits



Used on ALL types of Thermal Printers :

Card Printers

Barcode Printers

Label Printers

Receipt Printers

Kiosk Printers

Cashless Ticket /Slot Ticket Printers



Thermal Printer Cleaning Card

Thermal Printer Cleaning Card is used for routine preventive maintenance of all types of Card , Barcode, Label, Receipt, Kiosk and Cashless Ticket/Slot Ticket Thermal Printers.

This Cleaning Card is either pre-saturated with **99.9% Electronic-grade IPA Solution (Iso Propyl Alcohol)** or **Alcohol-free Cleaner** depending on Customer's specific need.

It is designed to effectively remove the Ink or Adhesive Residue, Burnt-on Debris, Dirt and Contaminants from the Printer Head and Platen Roller.



Standard Sizes Available : 2.0" x 6.0", 2.25" x 6.0", 2.5" x 6.0", 3.0" x 6.0", 4" x 6".

Other Sizes can be customized.

Standard Packaging : 25 Cards per box.

We provide Private Label Services for Customer's OEM Brand.



Cleaning Swabs or Pens

Cleaning Swabs or Pens can be used to remove visible deposits from the Print Head when print abnormality appears on printed cards. It is important not to use a sharp object to scrape deposits from the Print Head, as it may permanently damage the Print Head.



It is more economical to use either an IPA self-saturated Foam Swab or an IPA pre-saturated Clean Swab to clean the Thermal Print Head.

An IPA Cleaning Pen is the best option for repeated use.

Application : Regular cleaning of the Thermal Print Head will greatly improve high quality graphic image printing, thus extending the service life of the Print Head.



Cleaning Swabs or Pens

Thermal Print Head Self-saturated Foam Swab, Pre-saturated Clean Swab and Cleaning Pen.

1) IPA Pre-saturated Clean Swab

Length of Swab : approximately 5.0"

Packaging : 50 Swabs/Box

Part Number : IPAPFS-707



2) IPA Cleaning Pen

Packaging : 12 Pens/Box

Part Number : IPACP-03

3) IPA Self-saturated Foam Swab

Length of Swab : approximately 4.5"



Packaging : 25 Swabs/Box
Part Number : IPASS-4.5-25





Packaging : 50 Swabs/Box
Part Number : IPASS-4.5-50



Thermal Print Head Lapping Film

Lapping film roll can be fabricated into Sheets of various sizes : 3" x 6" , 4" x 6" , 4" x 8" , or even customised to meet Customer's specific need.

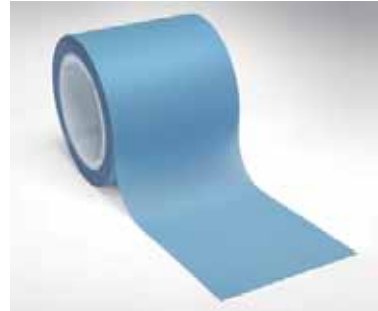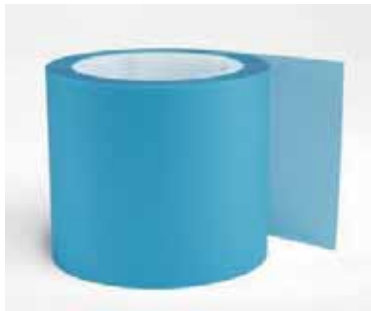

4" x 6" Lapping Film is the most popular size sold in the market.

If there are light scratches on the Thermal Print Head, you can restore the surface by polishing it with aluminium oxide coated Lapping Film. But special care must be taken to ensure that polishing is carried out correctly.

It is individually packed in a zip lock Poly Bag.

Each Lapping Sheet can be used up to 6 times.

Application : It removes burnt-on contaminants, as well as refurbishes and restores all print heads.





Thermal Print Head Cleaning with Pen, Self-saturated Foam Swab and Pre-saturated Clean Swab

Meditech Cleaning Pens/Foam Swabs/Clean Swabs can be used on all types of Thermal Print Head Cleaning :

- 1) Card Printers
- 2) Barcode Printers
- 3) Label Printers
- 4) Receipt Printers
- 5) Kiosk Printers



Thermal Print Head Cleaning
with Pen

Thermal Print Head Cleaning
with Pre-saturated Clean Swab



Thermal Print Head Cleaning
with Self-saturated Foam Swab



Meditech Technology Co.,Ltd

226 Xinpo Road, Potoubei, Ailian Community, Longcheng Street,
Longgang District, Shenzhen, 518172

Guangdong Province, China

Tel: (86) 755-28690225

Fax: (86) 755-28646977

Website: www.meditech.cc

E-mail: info@meditech.cc / meditech.cc@gmail.com

Skype: meditech.cc

QQ: 2691048102

Thermal Print Head Maintenance Cleaning Cards, Swabs, Pens and Wipes

